



**Dream**  
**USER GUIDE**

---

motorisation made easy

# CONTENTS

## **DREAM MOTOR & CONTROL SPECIFICATIONS 5**

<b>1. DREAM MOTORS</b>	
1A. ROLLER BLIND MOTORS	6
1B. ROMAN / PLEATED BLIND MOTORS	9
1C. CURTAIN MOTORS	10
<b>2. DREAM CONTROLS</b>	
2A. DREAM 15 CHANNEL REMOTE	11
2B. DREAM 15 CHANNEL WALL SWITCH	11
2C. DREAMHUB PRO	12
2D. DREAMHUB MINI	12
2E. DREAM SIGNAL BOOSTER	13
2F. DREAM SUN SENSOR	13

## **PROGRAMMING INSTRUCTIONS 15**

<b>1. ROLLER &amp; ROMAN / PLEATED MOTORS</b>	
1A. BUTTON SPECIFICATION	16
1B. P1 BUTTON SETTINGS	17
P1 SHORT PRESS FUNCTION	17
SLEEP MODE	17
P1 SWITCHING DIRECTION	17
RESTORING FACTORY SETTINGS	17
1C. PAIRING A REMOTE / WALL SWITCH & INITIAL SETTINGS	18
PAIRING A REMOTE / WALL SWITCH WITH A MOTOR	18
REMOVING A MOTOR FROM A REMOTE / WALL SWITCH	18
SWITCHING DIRECTION	18
SETTING THE TOP LIMIT	19
SETTING THE BOTTOM LIMIT	19
1D. ADVANCED SETTINGS	19
SWITCHING FROM CONTINUOUS TO JOG MODE	19
SWITCHING FROM JOG TO CONTINUOUS MODE	20
INCREASING MOTOR SPEED	20
DECREASING MOTOR SPEED	20
FINE-TUNING A TOP LIMIT	20
FINE-TUNING A BOTTOM LIMIT	21
SETTING A FAVOURITE STOP POSITION	21
ADDING / REMOVING REMOTE CONTROL DEVICE	21
MOVING A BLIND TO ANOTHER CHANNEL	21

<b>2. CURTAIN MOTORS</b>	
2A. BUTTON SPECIFICATION	22
2B. P1 BUTTON SETTINGS	23
DEACTIVATING REMOTE CONTROL	23
RESTORING FACTORY SETTINGS	23
2C. PAIRING A REMOTE / WALL SWITCH & INITIAL SETTINGS	23
PAIRING A REMOTE / WALL SWITCH WITH A MOTOR	23
SWITCHING DIRECTION - METHOD 1	24
SWITCHING DIRECTION - METHOD 2	24
SETTING LIMITS	24
CLEARING LIMITS	24
2D. ADVANCED SETTINGS	25
SETTING A FAVOURITE STOP POSITION	25
CLEARING A FAVOURITE STOP POSITION	25
FINE-TUNING AN OPEN LIMIT	25
FINE-TUNING A CLOSED LIMIT	25
INCREASING MOTOR SPEED	26
DECREASING MOTOR SPEED	26
ACTIVATING/DEACTIVATING 'PULL TO START' CONTROL	26
<b>3. DREAM 15 CHANNEL REMOTE</b>	
HIDE / UNHIDE CHANNEL FUNCTION	27
UNI-DIRECTION / BI-DIRECTION SWITCHING MODE	27
LOCKING/UNLOCKING REMOTE	27
<b>4. DREAM 15 CHANNEL WALL SWITCH</b>	
HIDE / UNHIDE CHANNEL FUNCTION	28
UNI-DIRECTION / BI-DIRECTION SWITCHING MODE	28
LOCKING / UNLOCKING REMOTE	28
<b>5. DREAMHUB PRO &amp; DREAMHUB MINI</b>	<b>29</b>
<b>6. DREAM SIGNAL BOOSTER</b>	<b>29</b>
<b>7. DREAM SUN SENSOR</b>	<b>30</b>

**CONFORMITY DECLARATION** **32**

**DISPOSAL INSTRUCTIONS** **32**



# **DREAM MOTORS & CONTROLS**

---

# 1. DREAM MOTORS

Roller, Roman and pleated blinds motor setup and programming - [page 16](#)

Curtain track motor setup and programming - [page 22](#)

## 1A. ROLLER BLIND MOTORS

### ROLLER BLIND MOTORS FUNCTIONAL FEATURES

Bi-directional Functionality	Built-in Lithium-ion Battery (battery motors)	Favourite Stop Position
Electronic Limit Setting	Mains / Solar Charging (battery motors)	Internally Stored Settings
Jog Mode	Switch Direction	Three Speeds Setting (battery motors)
Program / Operation Button P1	Built-in Radio Receiver	Pair with up to 10 Control Devices
Smart Home Compatible with DreamHub	Micro USB/USB-C/DIN Charging (depending on motor)	Connector App


#### ROLLER 15 BATTERY MOTOR 191709



Micro  
USB

CHARGING:  
3m Micro USB Cable and Adaptor | 191701


#### ROLLER 38 BATTERY MOTOR 191723

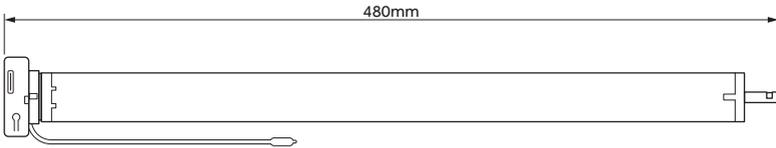

USB-C


CHARGING:  
3m USB-C Cable and Adaptor | 191762

#### ROLLER 38 MAINS MOTOR 191731

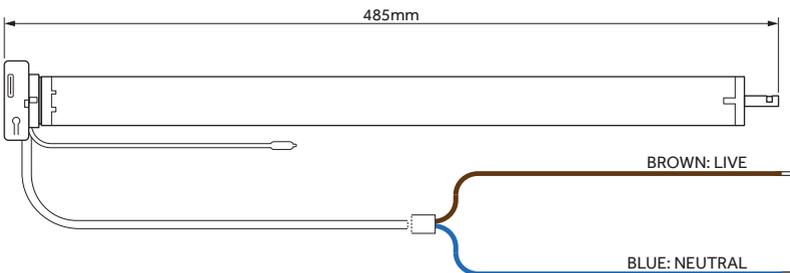

Cable  
length  
5m


### ROLLER 45 BATTERY MOTOR 191713

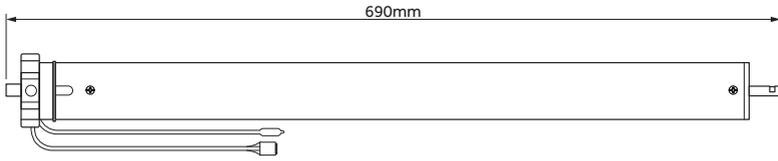

Micro  
USB


CHARGING:  
3m Micro USB Cable and Adaptor | 191701

### ROLLER 45 MAINS MOTOR 191633

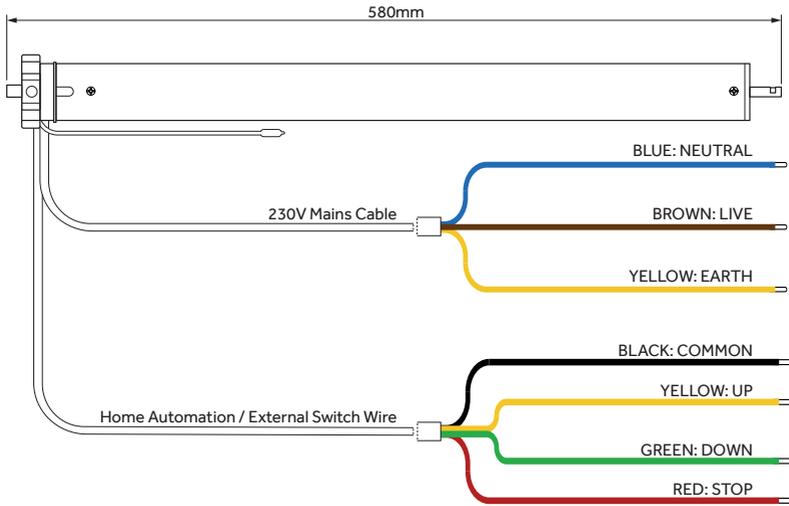


Cable  
length  
2.5m

### ROLLER 45 WIRED MOTOR 191647

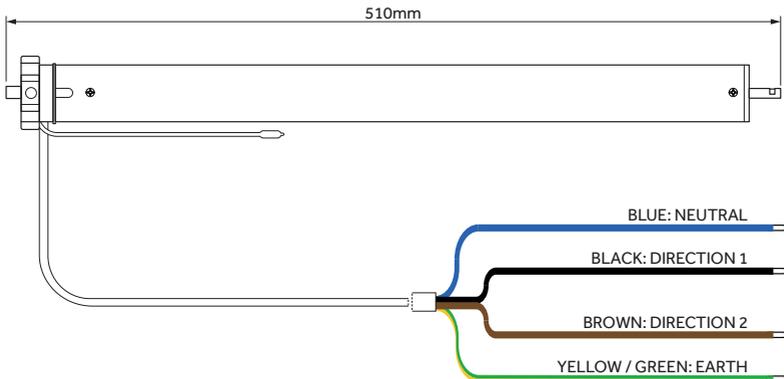

Cable  
length  
3m


### ROLLER 15 BATTERY MOTOR 191709

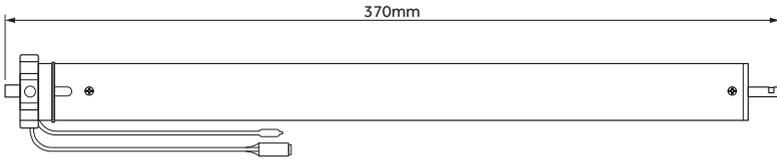


DIN

CHARGING:  
DIN Charger & 3m Extension Lead | 191692

### ROLLER 38 MAINS MOTOR 191731

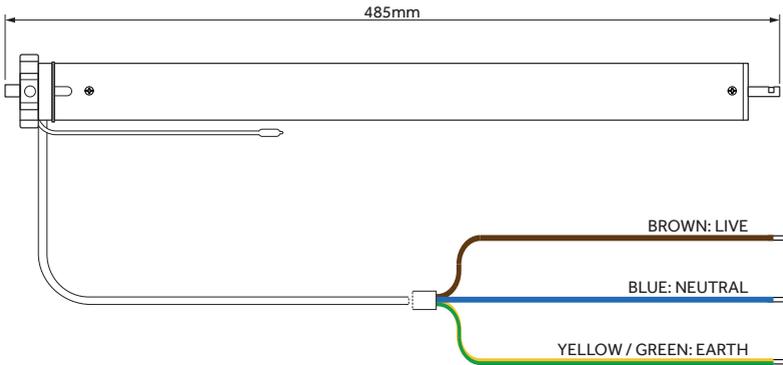

Cable  
length  
5m

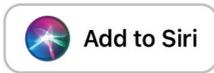

## MOTOR TECHNICAL SPECIFICATIONS

Visit our website for the technical specifications of our motors


[decorquip.com/product-category/motorisation](http://decorquip.com/product-category/motorisation)

# 1B. ROMAN / PLEATED BLIND MOTOR

## ROMAN/PLEATED MOTOR FUNCTIONAL FEATURES


Bi-directional Functionality	External Lithium-ion Battery	Favourite Stop Position
Electronic Limit Setting	USB-C Charging	Internally Stored Settings
Jog Mode	Switch Direction	Connector App
Program / Operation Button P1	Built-in Radio Receiver	Pair with up to 10 Control Devices
Smart Home Compatible with DreamHub	USB-C Solar Panel Charging Available	

## ROMAN / PLEATED LV MOTOR 191695

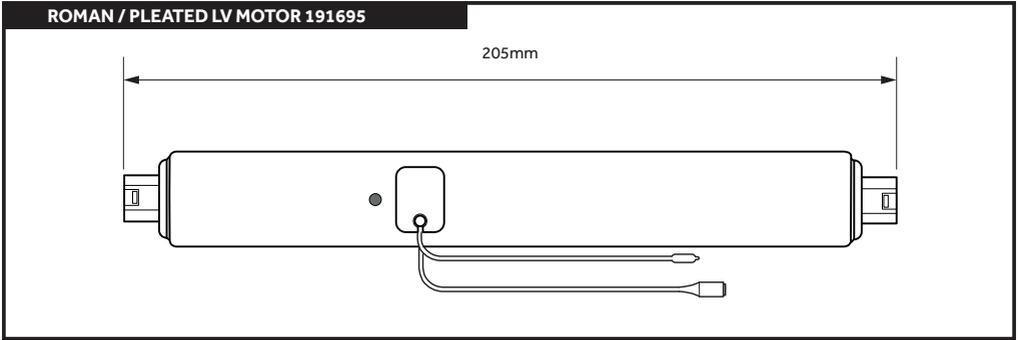


## POWER OPTIONS

### LI-ION BATTERY USB-C 191721

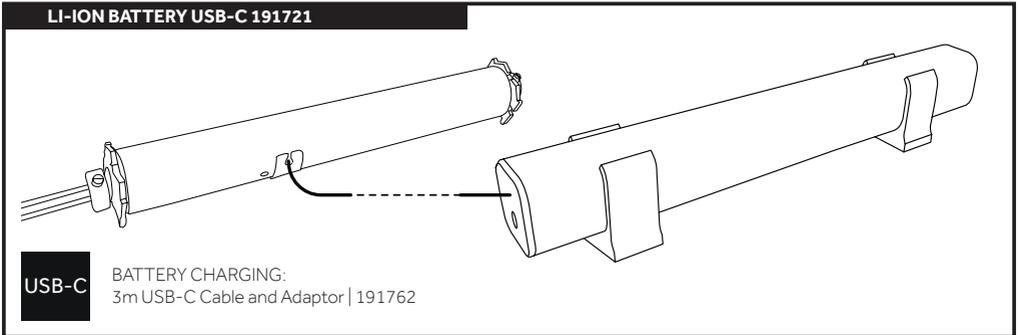

### POWER ADAPTOR & 3m EXTENSION CABLE 191702

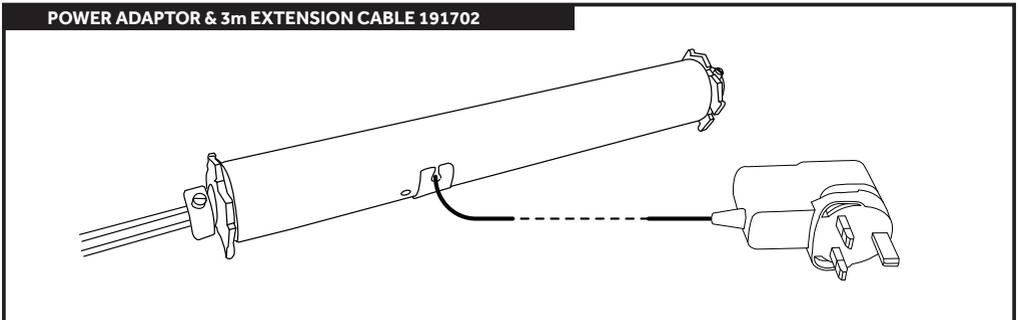


# 1C. CURTAIN MOTORS

## CURTAIN MOTORS FUNCTIONAL FEATURES

Bi-directional Functionality	Built-in Lithium-ion Battery (battery motor)	Favourite Stop Position
Electronic Limit Setting	Mains / Solar Charging (battery motor)	Internally Stored Settings
Manual Control Override	Switch Direction	Three Speeds Setting (battery motors)
Program / Operation Button P1	Built-in Radio Receiver	Pair with up to 10 Control Devices
Smart Home Compatible with DreamHub	USB-C Charging	Connector App


### CURTAIN BATTERY MOTOR 191782

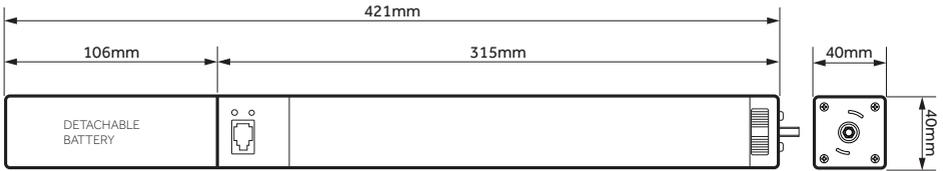

USB-C

CHARGING:  
3m USB-C Cable and Adaptor | 191762

### CURTAIN MAINS MOTOR 191780

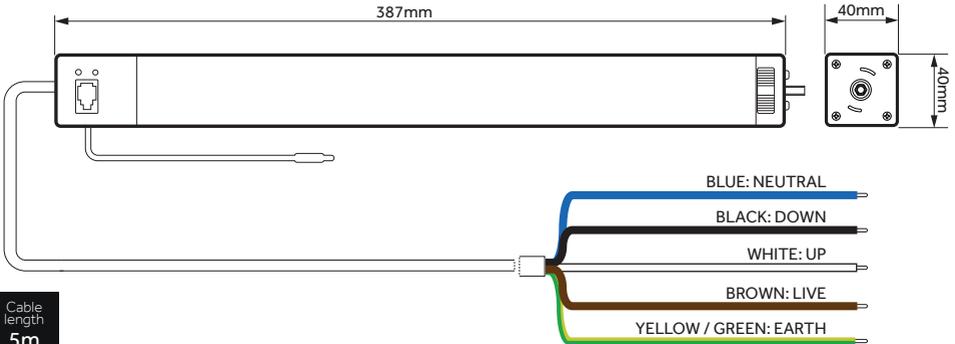

Cable length  
5m



## MOTOR TECHNICAL SPECIFICATIONS

Visit our website for the technical specifications of our motors  
[decorquip.com/product-category/motorisation](https://decorquip.com/product-category/motorisation)


# 2. DREAM CONTROLS

## 2A. DREAM 15 CHANNEL REMOTE 191679

The remote is compatible with all bi-directional Dream motors and older uni-directional motors. For programming and pairing options, refer to **page 16**. For additional functionality, refer to **page 27**.

### DREAM REMOTE FUNCTIONAL FEATURES

- Bi-directional & Uni-directional Functionality
- 15 Channels
- Pair up to 20 motors per channel
- Channel '0' to operate all paired blinds simultaneously
- Button Lock / Unlock option
- Hide / Unhide Channel option
- Standard CR2450 Cell Battery
- Quick Release Magnetic Wall Bracket

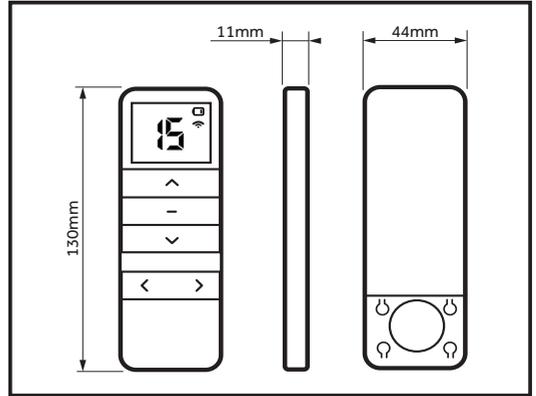


## 2B. DREAM 15 CHANNEL WALL SWITCH 191685

The wall switch is compatible with all bi-directional Dream motors and older uni-directional motors. The programming and pairing process is exactly the same as for the remote. For programming and pairing options, go to **page 16**. For additional features, refer to **page 28**.


### DREAM WALL SWITCH FUNCTIONAL FEATURES

- Bi-directional & Uni-directional Functionality
- 15 Channels
- Pair up to 20 motors per channel
- Channel '0' to operate all paired blinds simultaneously
- Button Lock / Unlock option
- Hide / Unhide Channel option
- Standard CR2450 Cell Battery
- Wall Bracket

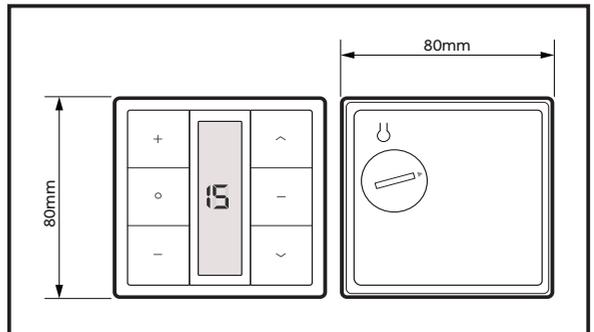


## 2C. DREAMHUB PRO 191726

The DreamHub Pro works with all Dream motors by connecting them to your Wi-Fi network, enabling you to operate your blinds via smartphone using the free Connector app or voice control devices. For Connector app download instructions, please refer to **page 29**.

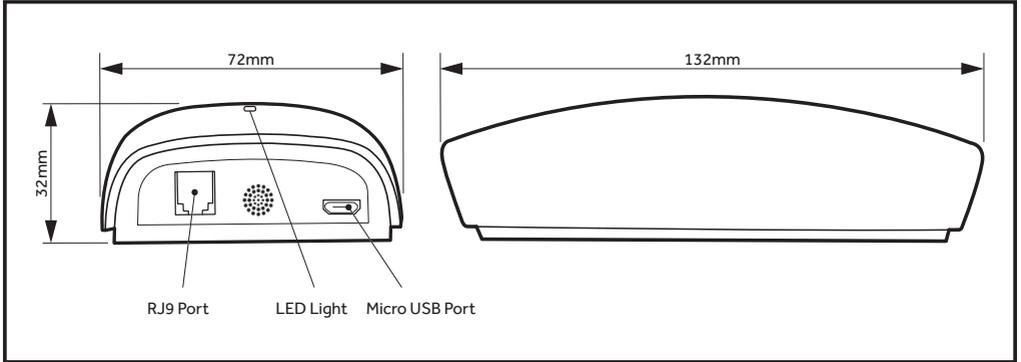


## 2D. DREAMHUB MINI 191717

The DreamHub Mini is a smaller version of its Pro equivalent and, likewise, works with all Dream motors. Connect it to your Wi-Fi network to operate your blinds via smartphone using the free Connector app or voice control devices. For Connector app download instructions, refer to **page 29**.

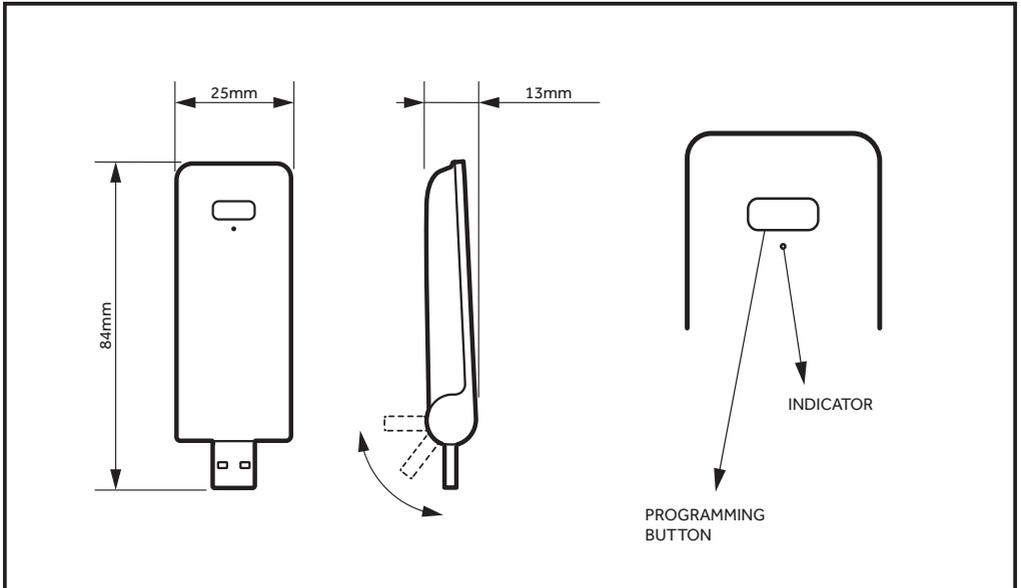


## 2D. DREAM SIGNAL BOOSTER 191716

The Dream Signal Booster works with all Dream motors and control devices. When positioned between a control device and blinds, it extends the signal range up to 200m. For setup instructions, refer to **page 29**.

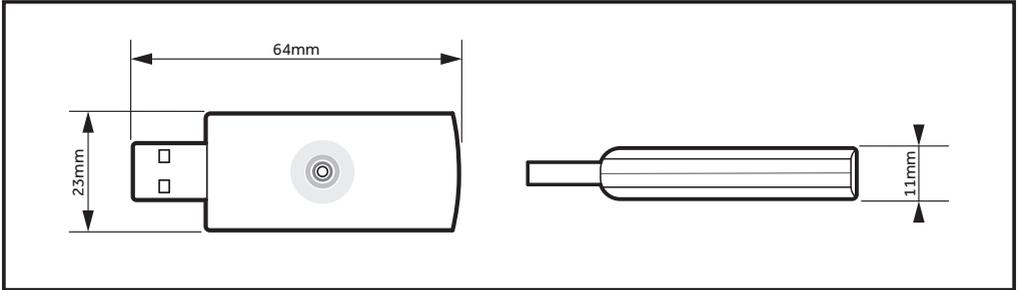

## 2F. DREAM SUN SENSOR 191727

The Sun Sensor is compatible with all Dream Motors and operates on a simple premise: automatically closing blinds when the sun is too bright and opening them as soon as the situation changes. For programming and pairing instructions, please refer to **page 30**.

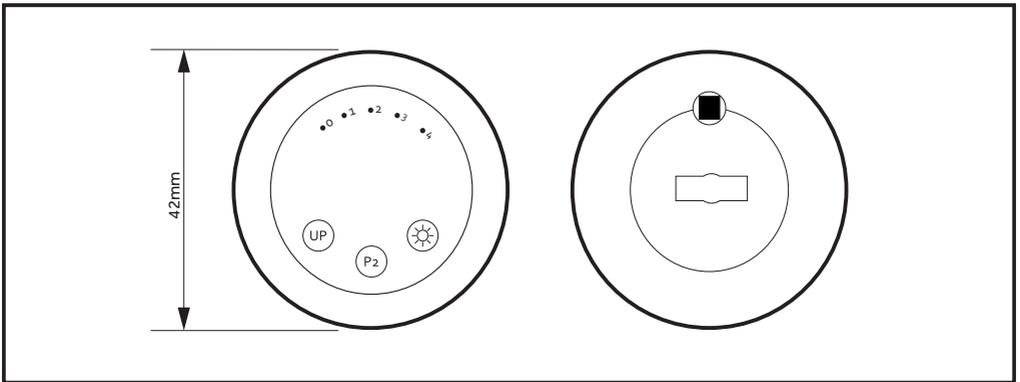

### CONTROL DEVICES TECHNICAL SPECIFICATIONS

Visit our website for the technical specifications of our motors and control devices  
[decorquip.com/product-category/motorisation](http://decorquip.com/product-category/motorisation)






# **PROGRAMMING INSTRUCTIONS**

---

# 1. ROLLER, ROMAN & PLEATED MOTORS/ 15 CHANNEL REMOTE & WALL SWITCH

Every motor in our Dream range is equipped with bi-directional technology, which not only provides them with smart functionality when coupled with smart devices but also makes setup and operation with our 15 Channel Remote and 15 Channel Wall Switch a quick and easy process. These instructions apply to all bi-directional Dream motors, including all roller, pleated, and Roman motors, whether battery or mains powered.


## 1A. BUTTON SPECIFICATION

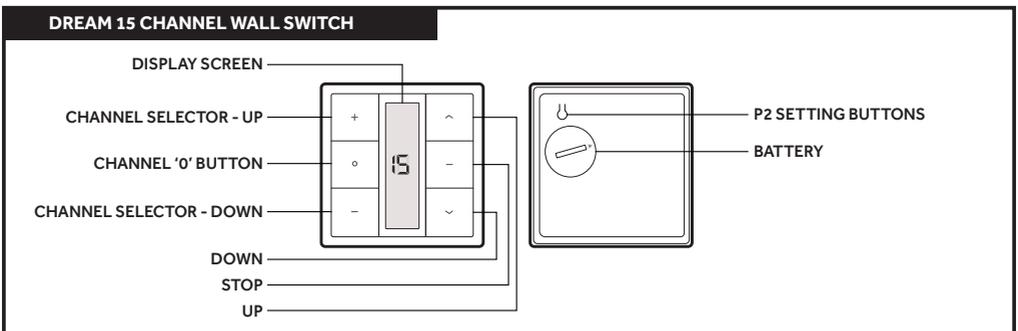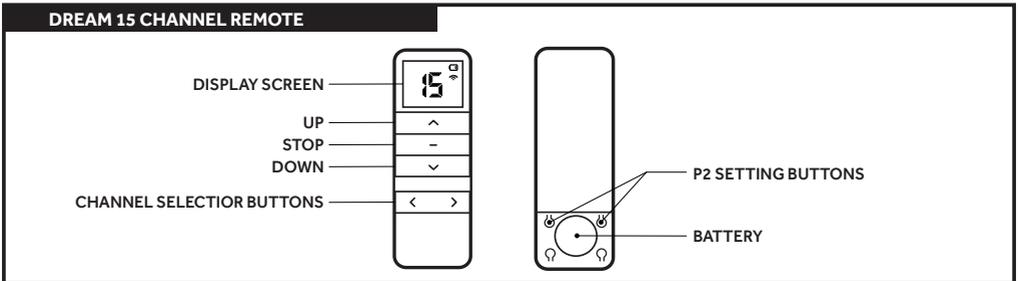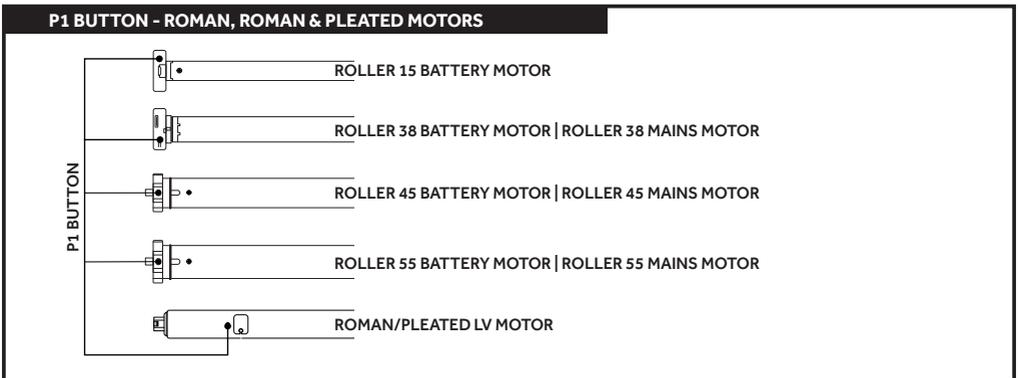

# 1B. P1 BUTTON SETTINGS

Settings and programming instructions are identical for all roller, Roman, and pleated motors. Crucial to these instructions is the P1 button, which can be found on every motor. The button is recessed into the motor to avoid accidental activation but is easily accessed with a pen or a similar device. In addition to being utilised in the pairing process, the P1 button can be used to control the blind when an external control device is unavailable, as well as for functions such as restoring factory settings.

**P1 SHORT PRESS FUNCTION**

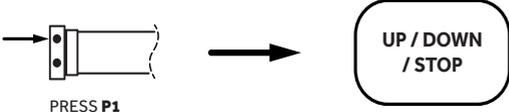


→

**NOTE:**  
When in jog mode, holding the **up** or **down** buttons will temporarily provide continuous movement.

PRESS **P1**  
FOR **1SEC**

**SLEEP MODE**

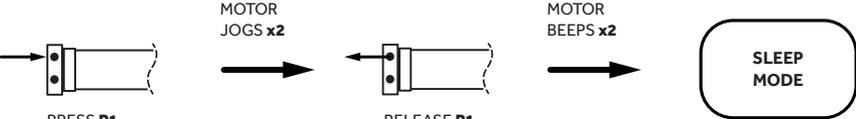

→

**NOTE:**  
Sleep mode can be utilised to temporarily deactivate a motor's radio functionality, allowing for multiple motors to be added to a shared channel without disruption. Press **P1** to restore functionality.

MOTOR  
JOGS **x2**

→

RELEASE **P1**


MOTOR  
BEEPS **x2**

→

**SLEEP  
MODE**

PRESS **P1**  
FOR **6SEC**

**P1 SWITCHING DIRECTION**

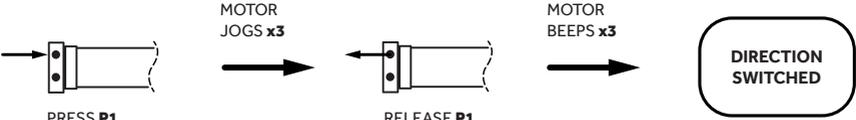

→

**NOTE:**  
Switching direction using the **P1** button is only available after the limits have been set.

MOTOR  
JOGS **x3**

→

RELEASE **P1**

MOTOR  
BEEPS **x3**

→

**DIRECTION  
SWITCHED**

PRESS **P1**  
FOR **10SEC**

**RESTORING FACTORY SETTINGS**



→




**FACTORY  
SETTINGS  
RESTORED**

PRESS **P1**  
FOR **14SEC**


MOTOR  
JOGS **x4**  
BEEPS **x4**

# 1C. PAIRING A REMOTE / WALL SWITCH AND INITIAL SETTINGS


Before starting the process of pairing a handheld remote / wall switch to a Dream motor, choose the channel to which it is to be paired. Channel 0 is reserved for simultaneously controlling all blinds paired to a remote and cannot be used for pairing, programming, or other adjustments. If using a battery-powered motor, ensure that it is sufficiently charged to complete the setup process.

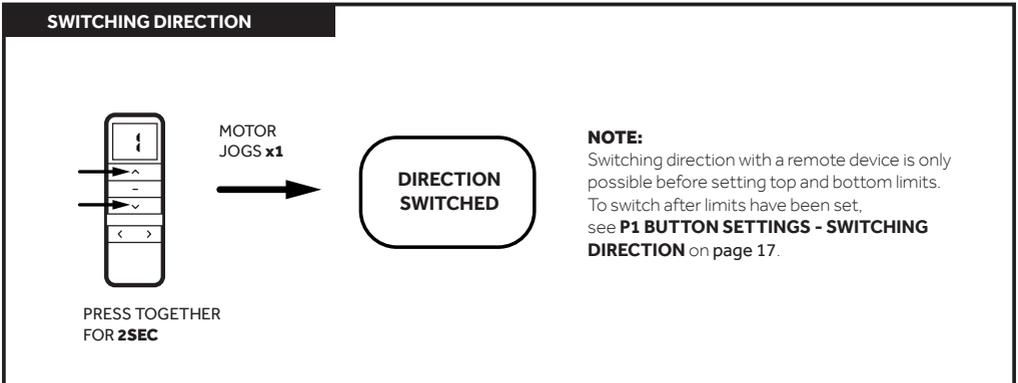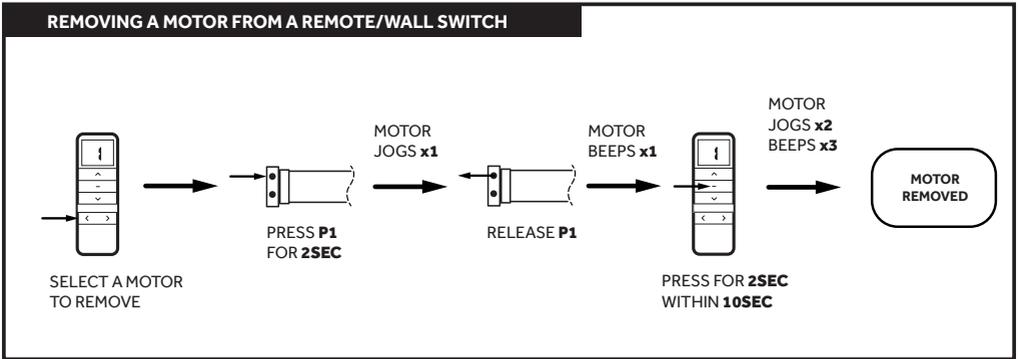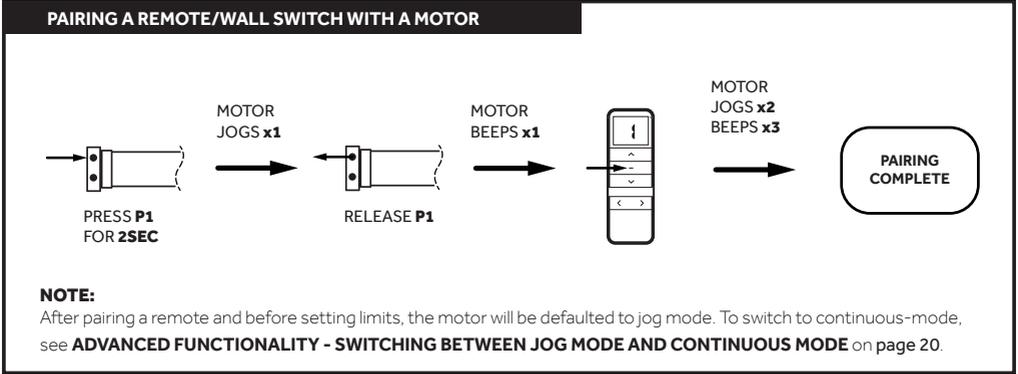

## SETTING THE TOP LIMIT

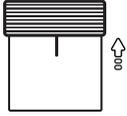

RUN BLIND TO  
DESIRED TOP  
POSITION

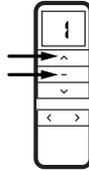


PRESS TOGETHER  
FOR **2SEC**

MOTOR  
JOGS **x2**  
BEEPS **x3**




**TOP  
LIMIT SET**

## SETTING THE BOTTOM LIMIT

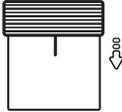

RUN BLIND TO  
DESIRED BOTTOM  
POSITION

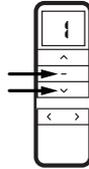

PRESS TOGETHER  
FOR **2SEC**

MOTOR  
JOGS **x2**  
BEEPS **x3**




**BOTTOM  
LIMIT SET**

### NOTE:

After setting top and bottom limits, the motor will automatically switch to continuous mode. To switch to jog mode, see **ADVANCED FUNCTIONALITY - SWITCHING BETWEEN JOG MODE AND CONTINUOUS MODE** on page 20.


## 1D. ADVANCED SETTINGS

### SWITCHING FROM CONTINUOUS TO JOG MODE

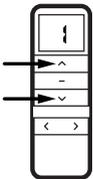

PRESS TOGETHER  
FOR **5SEC**

MOTOR  
JOGS **x1**

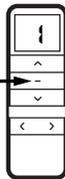

PRESS FOR  
**1SEC**

MOTOR  
JOGS **x1**  
BEEPS **x1**




**JOG  
MODE**

### NOTE:


When in jog mode, holding the up or down buttons will provide continuous moving temporarily.

### SWITCHING FROM JOG TO CONTINUOUS MODE

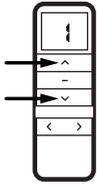

PRESS TOGETHER FOR 5SEC

MOTOR JOGS x1

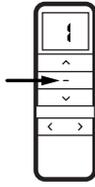

PRESS FOR 1SEC


MOTOR JOGS x2  
BEEPS x3



#### NOTE:


When in jog mode, holding the **up** or **down** buttons will provide continuous moving temporarily.

### INCREASING MOTOR SPEED | BATTERY MOTORS ONLY

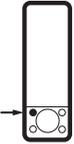


PRESS P2 FOR 1SEC

MOTOR JOGS x1  
BEEPS x1

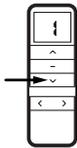

PRESS FOR 1SEC

MOTOR JOGS x1  
BEEPS x1

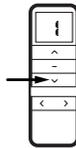

PRESS FOR 1SEC

MOTOR JOGS x2  
BEEPS x1



#### NOTE: Three motor speed levels available

If the motor does not respond to these instructions, it has already reached its maximum speed setting.

### DECREASING MOTOR SPEED | BATTERY MOTORS ONLY



PRESS P2 FOR 1SEC

MOTOR JOGS x1  
BEEPS x1



PRESS FOR 1SEC

MOTOR JOGS x1  
BEEPS x1



PRESS FOR 1SEC


MOTOR JOGS x2  
BEEPS x1



#### NOTE: Three motor speed levels available


If the motor does not respond to these instructions, it has already reached its minimum speed setting.

### FINE-TUNING A TOP LIMIT

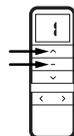


PRESS TOGETHER FOR 5SEC

MOTOR JOGS x1  
BEEPS x1

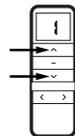

JOG TO DESIRED POSITION

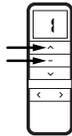


PRESS TOGETHER FOR 2SEC


MOTOR JOGS x2  
BEEPS x3



### FINE-TUNING A BOTTOM LIMIT

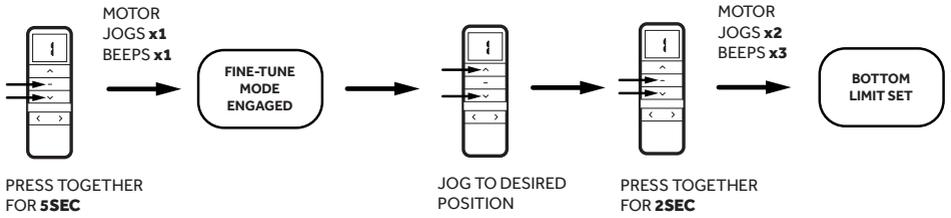


### SETTING A FAVOURITE STOP POSITION

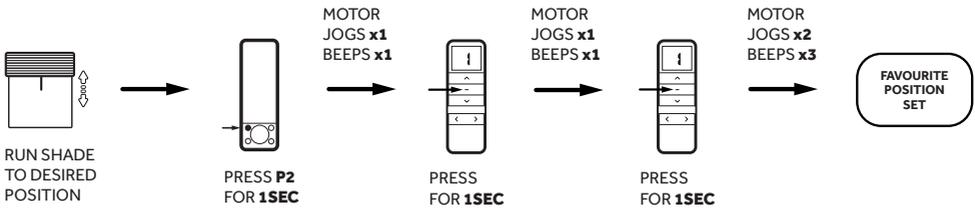

**NOTE:**


Once the favourite stop position has been set, it can be activated by holding the **stop** button for 2 seconds.

### ADDING/REMOVING REMOTE CONTROL DEVICE

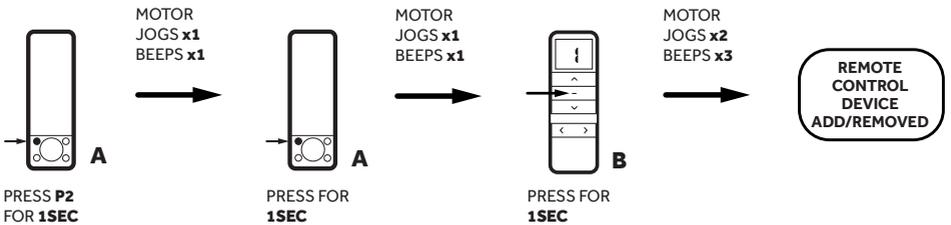

**A** - Existing remote control device. **B** - Remote control device to add / remove.




### MOVING A BLIND TO ANOTHER CHANNEL

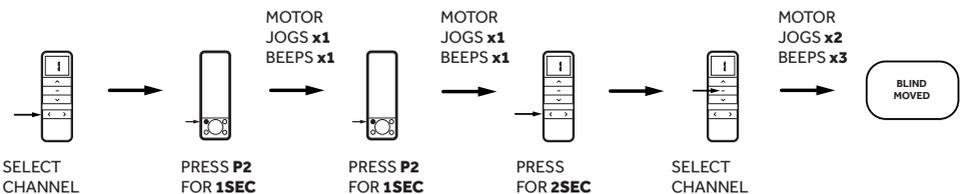



# 2. CURTAIN MOTORS / 15 CHANNEL REMOTE & WALL SWITCH

Both battery and mains Dream curtain motors are equipped with bi-directional technology, which not only provides them with smart functionality when coupled with smart devices but also makes the setup and operation with our 15 Channel Remote and 15 Channel Wall Switch a quick and easy process.

## 2A. BUTTON SPECIFICATION

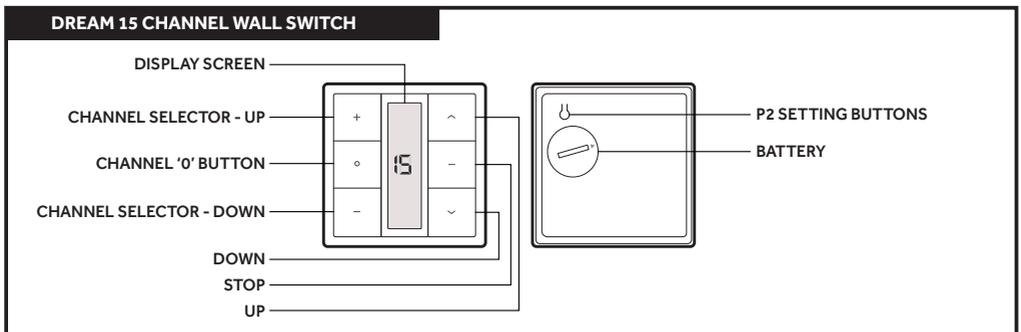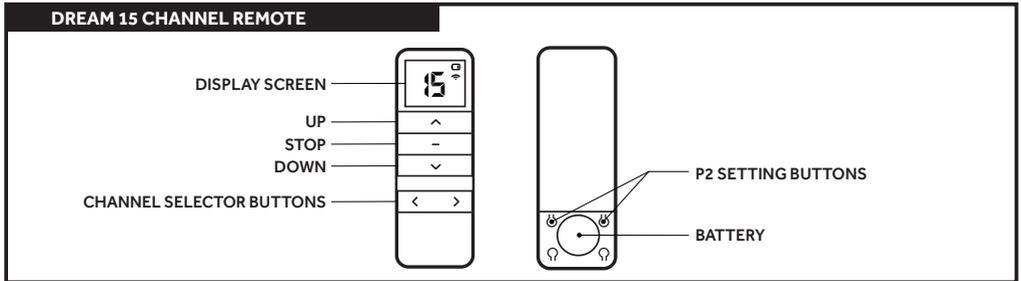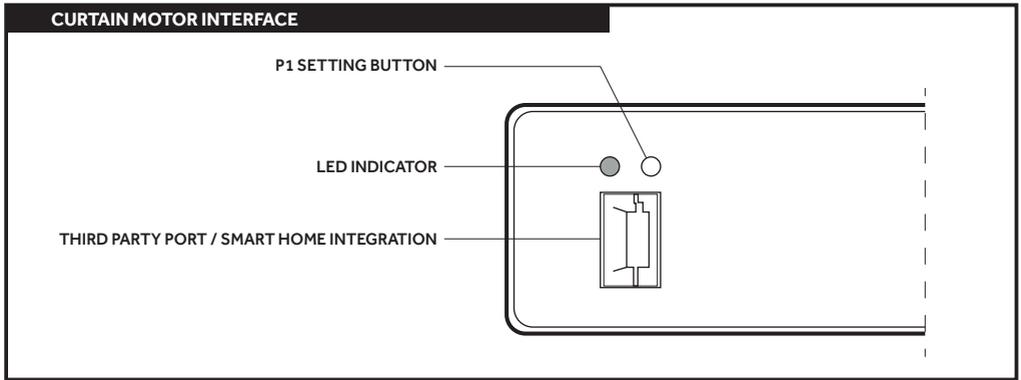


## 2B. P1 BUTTON SETTINGS

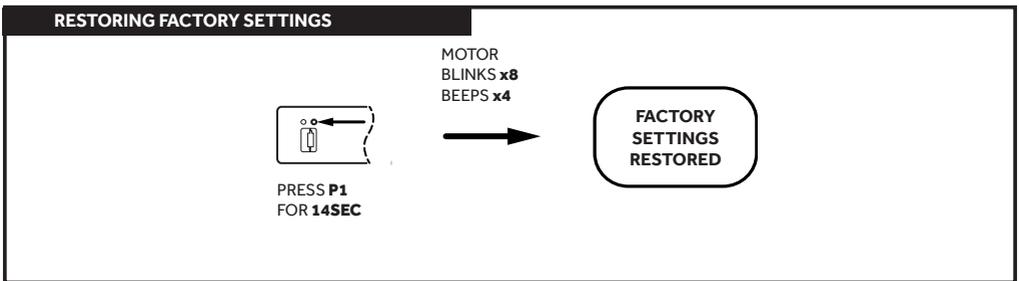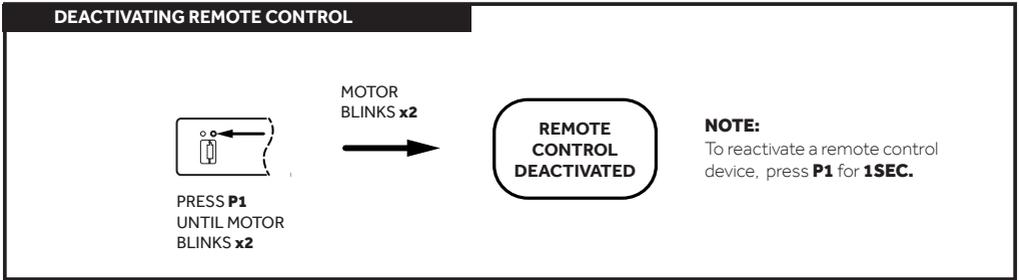


## 2C. PAIRING A REMOTE/WALL SWITCH AND INITIAL SETTINGS

Before starting the process of pairing a handheld remote / wall switch to a Dream motor, choose the channel to which it is to be paired. Channel 0 is reserved for simultaneously controlling all blinds paired to a remote and cannot be used for pairing, programming, or other adjustments. If using a battery-powered motor, ensure that it is sufficiently charged to complete the setup process.

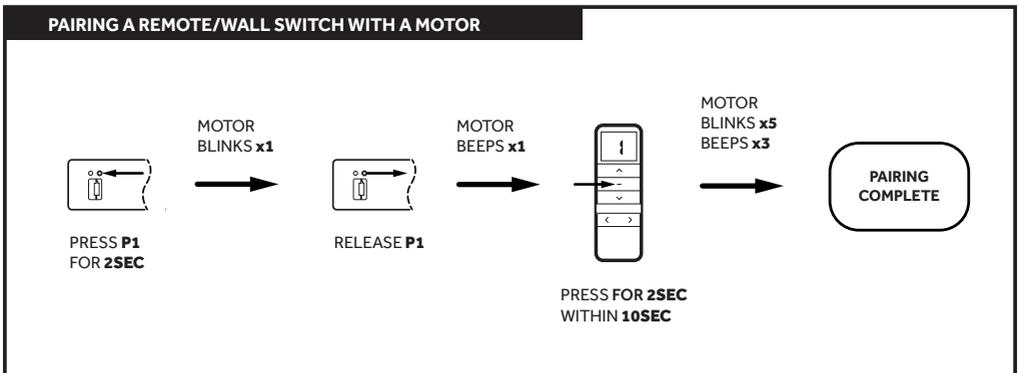

### SWITCHING DIRECTION | METHOD 1

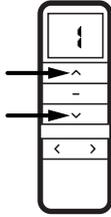

PRESS TOGETHER  
FOR 2SEC

MOTOR  
BLINKS x5  
BEEPS x3



DIRECTION  
SWITCHED

#### NOTE:

Switching direction with a remote device is only possible before setting the top and bottom limits. To switch direction after the limits have been set use **METHOD 2**.

### SWITCHING DIRECTION | METHOD 2



PRESS P1  
FOR 10SEC

MOTOR  
BLINKS x3



RELEASE P1

MOTOR  
BEEPS x3




PRESS FOR 2SEC  
WITHIN 10SEC

MOTOR  
BLINKS x5  
BEEPS x3



DIRECTION  
SWITCHED


### SETTING LIMITS

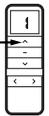

PRESS  
FOR 1SEC



OPEN CURTAIN TO  
DESIRED POSITION

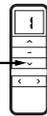

PRESS  
FOR 1SEC



CLOSE CURTAIN TO  
DESIRED POSITION

MOTOR  
BLINKS x5  
BEEPS x3



LIMITS  
SET

### CLEARING LIMITS



PRESS P2  
FOR 1SEC



PRESS  
FOR 1SEC



PRESS P2  
FOR 1SEC




MOTOR  
BLINKS x5  
BEEPS x3

LIMITS  
CLEARED

## 2D. ADVANCED SETTINGS


### SETTING A FAVOURITE STOP POSITION

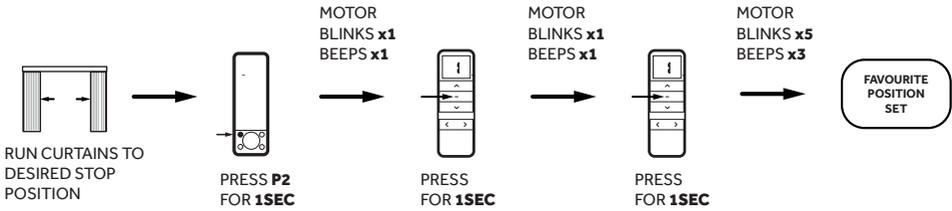


#### NOTE:

Pressing the stop button on remote control device for **2SEC** will automatically run the curtains to a favourite stop position.


### CLEARING A FAVOURITE STOP POSITION

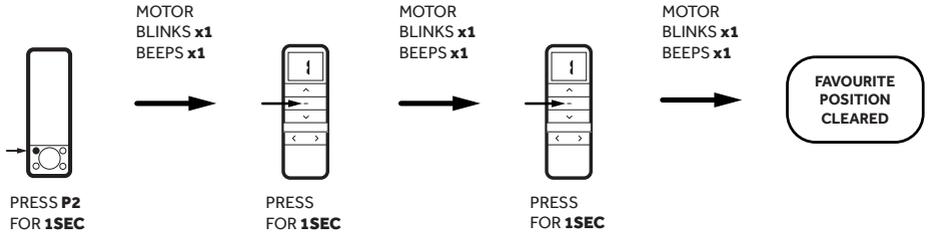

### FINE-TUNING AN OPEN LIMIT

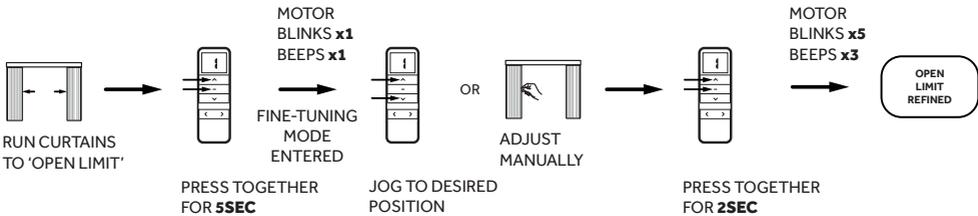

### FINE-TUNING A CLOSED LIMIT

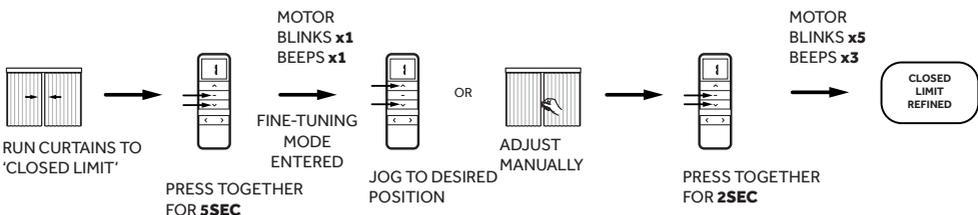


### INCREASING MOTOR SPEED



PRESS **P2**  
FOR **1SEC**

MOTOR  
BLINKS **x1**  
BEEPS **x1**

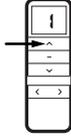

PRESS  
FOR **1SEC**

MOTOR  
BLINKS **x1**  
BEEPS **x1**



PRESS  
FOR **1SEC**

MOTOR  
BLINKS **x5**  
BEEPS **x3**



SPEED  
INCREASED

**NOTE:**


**Three motor speed levels available.**  
If the motor does not respond to these instructions, it has already reached its maximum speed setting.

### DECREASING MOTOR SPEED



PRESS **P2**  
FOR **1SEC**

MOTOR  
BLINKS **x1**  
BEEPS **x1**

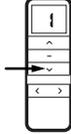

PRESS  
FOR **1SEC**

MOTOR  
BLINKS **x1**  
BEEPS **x1**



PRESS  
FOR **1SEC**

MOTOR  
BLINKS **x5**  
BEEPS **x3**



SPEED  
DECREASED

**NOTE:**

**Three motor speed levels available.**  
If the motor does not respond to these instructions, it has already reached its minimum speed setting.

### ACTIVATING / DEACTIVATING 'PULL TO START' CONTROL




PRESS **P1**  
FOR **10SEC**

MOTOR  
BLINKS **x3**



RELEASE **P1**

MOTOR  
BEEPS **x1**

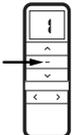

PRESS FOR **1SEC**  
WITHIN **10SEC**

MOTOR  
BLINKS **x5**  
BEEPS **x3**



PULL TO  
START  
ACTIVATED/  
DEACTIVATED

**NOTE:**

DEFAULT SETTING: **Pull to start activated**

# 3. DREAM 15 CHANNEL REMOTE


## ADDITIONAL FUNCTIONALITY

### HIDE / UNHIDE CHANNEL FUNCTION

Enables the user to hide or unhide unused or used channels. By selecting a specific channel, such as channel 5, channels 1 through 5 will remain active, while the other 10 unused channels will become hidden.

**NOTE:**


DEFAULT SETTING: **All 15 channels active.**

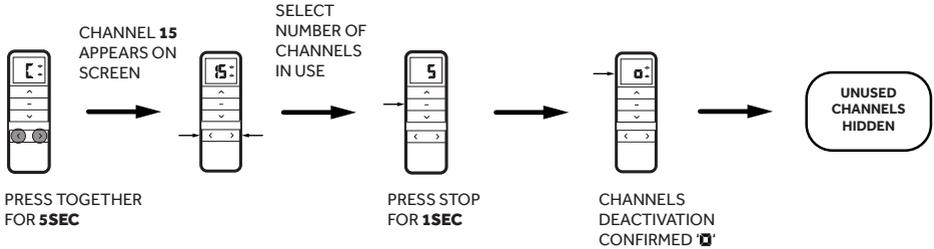

### UNI-DIRECTION / BI-DIRECTION SWITCHING MODE

**NOTE:**

DEFAULT SETTING: **Bi-direction**

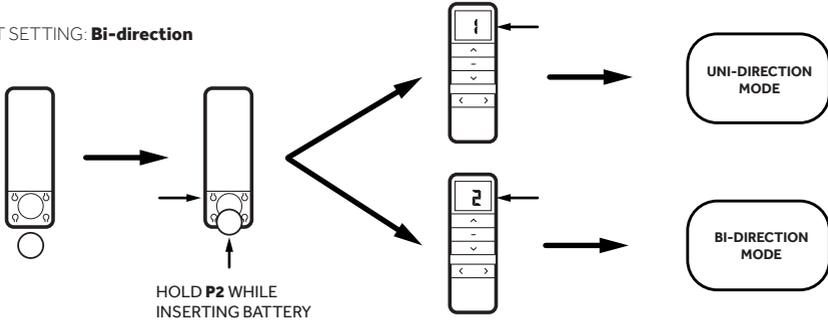


### LOCKING / UNLOCKING REMOTE

Enables or disables entering the remote setting mode without affecting normal blind operation.

**NOTE:**

DEFAULT SETTING: **Remote unlocked**

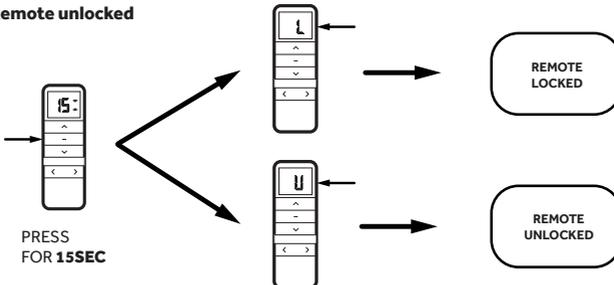

# 4. DREAM 15 CHANNEL WALL SWITCH


## ADDITIONAL FUNCTIONALITY

### HIDE / UNHIDE CHANNEL FUNCTION

Enables the user to hide or unhide unused or used channels. By selecting a specific channel, such as channel 5, channels 1 through 5 will remain active, while the other 10 unused channels will become hidden.

**NOTE:**


DEFAULT SETTING: **All 15 channels active.**

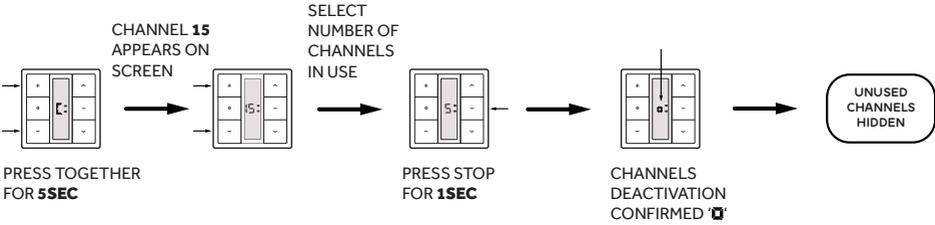

### UNI-DIRECTION / BI-DIRECTION SWITCHING MODE

**NOTE:**

DEFAULT SETTING: **Bi-direction**

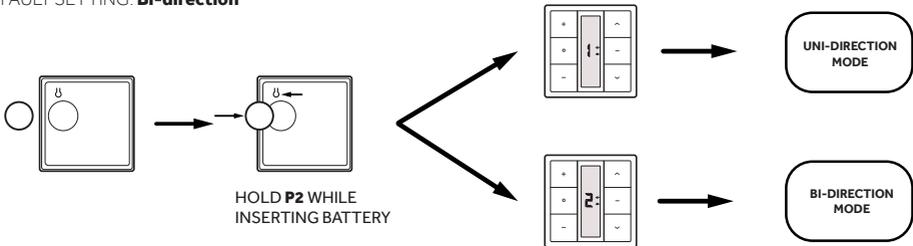


### LOCKING / UNLOCKING WALL SWITCH

Enables or disables entering the wall switch setting mode without affecting normal blind operation.

**NOTE:**

DEFAULT SETTING: **Wall switch unlocked**

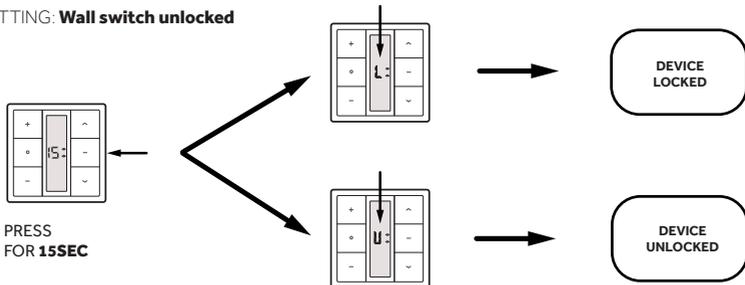

# 5. DREAMHUB PRO/DREAMHUB MINI

## SETTING UP CONNECTR APP AND DREAMHUB



Connector is a free app, developed by our partner Shade Connector, and is available for iOS and Android.

1. Download the Connector app to pair and operate your DreamHub and devices
2. If using the Connector app for the first time, create an account and sign in
3. Once signed in, follow the in-app wizard for setup and operation instructions

### CONNECTOR APP DOWNLOAD



iOS



Android



## CONNECTOR APP / DREAMHUB SETUP


Visit our YouTube channel for the video step-by-step guide

# 6. DREAM SIGNAL BOOSTER


## INSTALLATION

OPEN RANGE: **up to 200m**

'THROUGH TWO WALLS' RANGE: **up to 35mm**

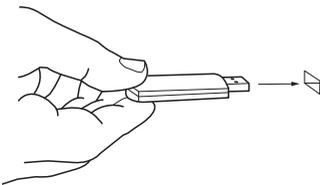


CONTINUOUS LIGHT  
BOOSTER READY TO RECEIVE  
AND TRANSMIT SIGNAL

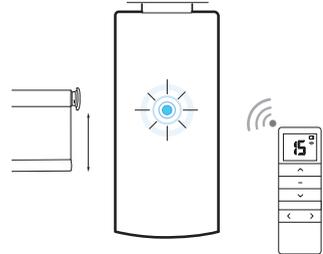


SINGLE BLEEP  
BOOSTER RECEIVES  
AND TRANSMITS SIGNAL

# 7. DREAM SUN SENSOR

## INTERFACE AND BUTTONS SPECIFICATION

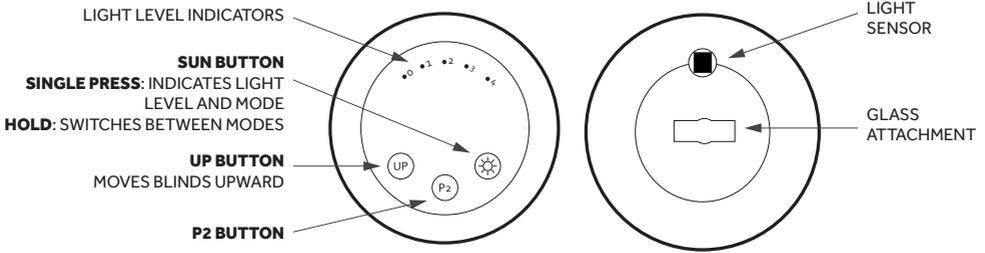

## PAIRING A SENSOR WITH A SINGLE BLIND

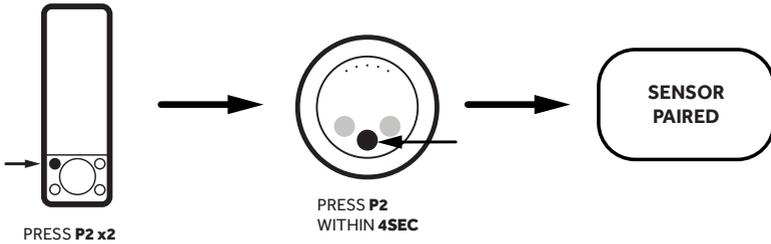


## PAIRING A SENSOR WITH MULTIPLE BLINDS



## MODES INDICATION

The amount of beeps indicates the mode.

- MODE 1 ☀️ ☀️
- MODE 2 ☀️ ☀️ ☀️
- MODE 3 ☀️ ☀️ ☀️ ☀️

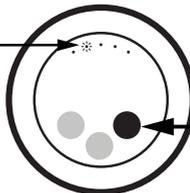

Press the **sun button x1**; the sensor indicates the light level and mode by emitting a beep and illuminating an indicator light.

## SWITCHING BETWEEN SENSOR MODES

### MODE 1


When the sun is continuously out for 2 minutes, the sensor will close the blind. You will need to use a remote control to open the blind again. After opening the blind, the process of closing will repeat as normal.

### MODE 2


When the sun is continuously out for 2 minutes, the sensor will close the blind. If the light level falls below the threshold of 15 kilolux (Light Level 1) for a continuous 15 minutes, the sensor will open the blind. Even a short burst of light over 15 kilolux after the blind has been shut will reset the sensor's timer, and the 15-minute countdown will start again.

### MODE 3

When the sun is continuously out for 2 minutes, the sensor will close the blind. If the light level falls below the threshold of 15 kilolux (Light Level 1) within 15 minutes, the sensor will open the blind instantaneously. If the light level falls below the threshold after 15 minutes, the sensor will open the blind after the next 15-minute interval.

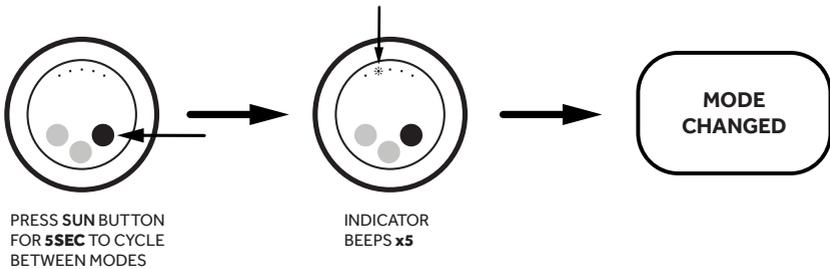


## SWITCHING LIGHT LEVELS

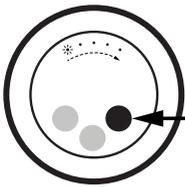

Press **sun** button in quick succession to cycle between **LIGHT LEVELS**

## LOW BATTERY WARNING

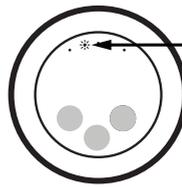


When the battery level is low, the indicator light will beep **x10** every **2 minutes**.

## TESTING APPLIED SETTINGS

### NOTE

In case of insufficient light conditions to trigger the Sun Sensor (e.g., on a cloudy day), test the applied settings by shining a torch directly at the light sensor on the back of the Sun Sensor for at least **2 minutes**.

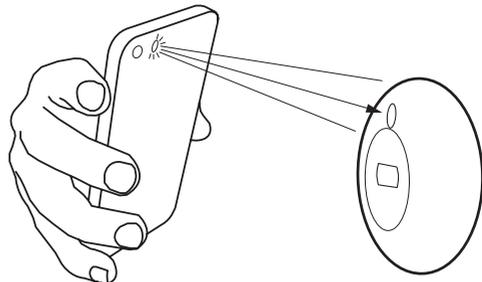

# CONFORMITY DECLARATION

Decorquip Ltd. hereby declares that Dream products are in conformity with the essential requirements of the applicable European Directives and, in particular, the Electromagnetic Compatibility Directive 2014/30/EU, Machinery Directive 2006/42/EC, and Radio Directive 2014/53/EU.

# DISPOSAL INSTRUCTIONS

Damaged or unused electrical products and batteries should not be disposed of with regular household waste. Please dispose of these items in compliance with local waste regulations. Alternatively, you can return your products to Decorquip Ltd.