

Twist Fit Roller Blind

Fitting, operation and maintenance instructions


Warning! The operating instructions must be read before operating the blind.

Fitting Instructions for Twist Fit Roller Blinds

This system does not require fixings. This procedure can be completed by non-professionals.

Step 1 - Preparation and Identification

Carefully remove the blind from its packaging. Identify the control end, which contains the operating mechanism with control chain, and the twist end, designed for secure positioning within the window recess.

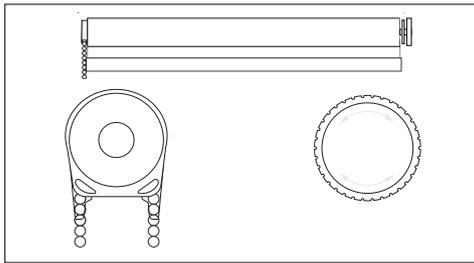


Control End Mechanism

Twist End Mechanism


Step 2 - Position the Blind

Place the blind into the prepared window recess. If the fit is tight, gently compress the control end to allow the blind to slide smoothly into position. Once inserted, confirm that the blind sits level and securely within the recess.

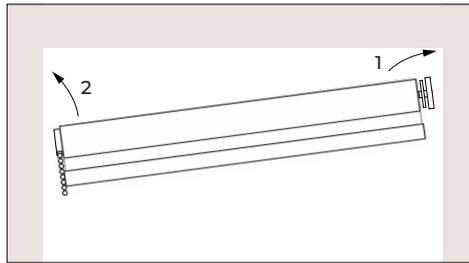


Step 2 - Secure the Blind

Secure the blind in place by tightening the twist end. Turn the twist mechanism towards the window to expand and hold the blind firmly within the recess. To loosen or adjust the blind, twist the mechanism away from the window

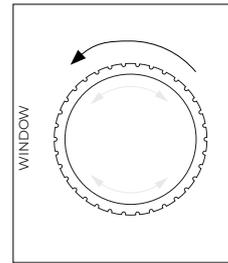

Tightening the blind

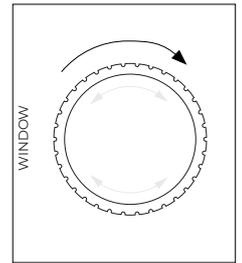

Loosening the blind


Note: If your blind is reverse rolled, the directions for tightening and loosening the twist mechanism in Step 3 will be reversed. Turn the mechanism away from the window to tighten, and towards the window to loosen.

Fitting the safety device: 'P' Clip 400990

This procedure can be completed by non-professionals.



Step 1 - Attach the 'P' Clip to the Chain

Once the blind is securely fitted, attach the 'P' Clip to the control chain.

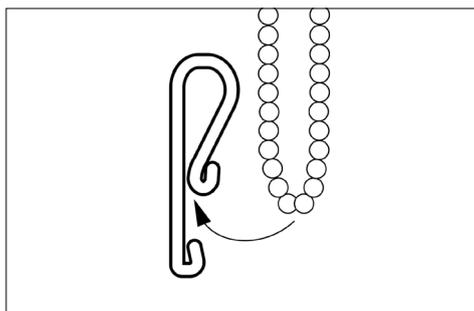



Step 2 - Mark fixing points

Pull the chain taut with the device, placing it as far from the control mechanism as possible. This keeps the chain tight, preventing slack and enhancing child safety. Once positioned, mark through the screw holes to indicate where the device will be fixed.

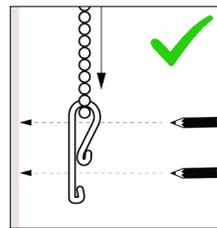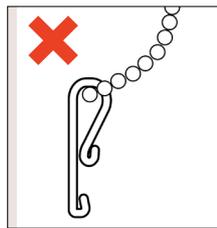


Step 3 - Secure the Device

Move the device to one side and, using the marks made in Step 2, drill and plug the holes. Then reposition the device and fix it into place, ensuring it is securely mounted.

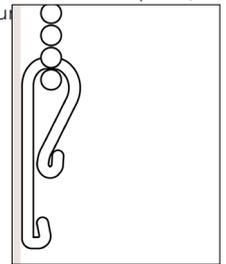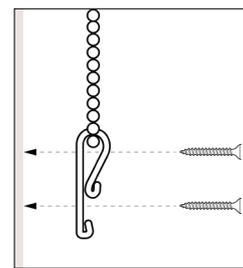

Note: If your blind has been supplied with a different safety device, please refer to the specific installation instructions available on our website for that device - www.decorquip.com

! WARNING !

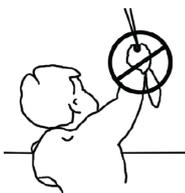

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product. To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop. Always fit the chain and rear cord safety devices.

Operation & Maintenance

Warning! The operating instructions must be read before operating the blind.

Operating instructions - Standard roll (Fabric unrolls from behind blind)

1. To lower the fabric on the roller blind gently pull the operating chain closest to the window.
2. To raise the fabric on the blind gently pull the operating chain furthest from the window.

Operating instructions - Reversed roll (Fabric unrolls from front of blind)

1. To lower the fabric on the roller blind gently pull the operating chain furthest from to the window.
2. To raise the fabric on the blind gently pull the operating chain closest to the window.

Maintenance Instructions

This product is designed to be maintenance-free; however, we recommend carrying out regular visual inspections to ensure that no components are damaged, as this could lead to operating difficulties or pose a safety risk. If any maintenance is required, it should be completed promptly by a reputable blind company.

For light cleaning, gently wipe or dust the fabric with a soft brush or duster.

For safety and performance, do not make alterations to the blind, chain, or safety device.